

# Multitone CH78

## User Guide



# Congratulations

on your new CH78 handset

Your new handset will provide you with the greatest possible degree of flexibility and mobility due to high battery capacity, practical weight, size and design.

This handset is supplied by Multitone Electronics as an OEM partner of Kirk Telecom. The handset may be used with Multitone messaging products



# Contents

<b>1 Getting Started</b>	<b>7</b>
1.1 Handset Information	7
1.2 Charger Information	7
1.3 Battery Information	8
1.4 Installing Battery	9
1.5 Charging Battery	10
1.6 Battery Capacity	11
1.7 Battery Disposal	11
<b>2 About Your 5020 Handset</b>	<b>12</b>
2.1 Handset Display	14
2.1.1 Status Icons	15
2.1.2 Display Backlight	16
2.2 Navigating Handset	17
2.2.1 Entering Main Menu	18
2.2.2 Scrolling in Menus	18
2.2.3 Confirming Choices	18
2.2.4 Navigating Cursor	18
2.2.5 Adjusting Volumes	18
2.2.6 Returning to Previous Menu	18
2.2.7 Leaving Menus	18
2.2.8 Shortcuts	18
<b>3 Basic Handset Options</b>	<b>21</b>
3.1 Turning Handset On/Off	21
3.2 Adjusting Speaker Volume	21
3.3 Locking Keypad	21
<b>4 Making Calls</b>	<b>22</b>
4.1 Dial Directly	22
4.2 On Hook Dialling (Pre-Dial)	22
4.3 Dial from Phone Book	22
4.4 Dial from Call List	23
4.5 Dial from Call Register	23
4.6 Redial	24
4.7 Speed Dial	24
<b>5 Answering Calls</b>	<b>25</b>
5.1 Auto Answer	25
5.2 Mute a Call	25
5.3 Reject a Call	25
5.4 Redirect a Call	25
<b>6 During Calls</b>	<b>27</b>
6.1 Turning Loudspeaker On/Off	27
6.2 Turning Microphone Mute On/Off	27

<b>7</b>	<b>Using the Menu</b>	<b>28</b>
7.1	Description of Menus	28
7.1.1	Phone Book	28
7.1.2	Call Register	28
7.1.3	Messages	28
7.1.4	Status	29
7.1.5	Bluetooth	29
7.1.6	Settings	29
7.1.7	External Services	29
7.2	List of Menu Functions	29
<b>8</b>	<b>Phone Book</b>	<b>32</b>
8.1	Using the Alphanumeric Keyboard	32
8.2	Managing an Existing Contact	32
8.2.1	Finding Contact in Phone Book	32
8.2.2	Dialing Contact from Phone Book	33
8.2.3	Editing Name/Number	33
8.2.4	Adding New Number	33
8.2.5	Adding to Speed Dial	34
8.2.6	Deleting Number	35
8.2.7	Deleting Speed Dial	35
8.2.8	Deleting Contact	35
8.3	Adding New Contact	36
<b>9</b>	<b>Call Register</b>	<b>37</b>
9.1	Incoming Calls	37
9.1.1	Viewing List of Incoming Calls	37
9.1.2	Adding an Incoming Call to Phone Book	37
9.1.3	Deleting an Incoming Call from List	38
9.2	Outgoing Calls	38
9.2.1	Viewing List of Outgoing Calls	38
9.2.2	Adding an Outgoing Call to Phone Book	38
9.2.3	Deleting an Outgoing Call from List	39
9.3	Missed Calls	39
9.3.1	Viewing List of Missed Calls	39
9.3.2	Adding a Missed Call to Phone Book	40
9.3.3	Deleting a Missed Call from List	40
9.4	Delete	40
9.4.1	Deleting All Incoming Calls	40
9.4.2	Deleting All Outgoing Calls	41
9.4.3	Deleting All Missed Calls	41
9.4.4	Deleting All Calls from All Lists	41

<b>10</b>	<b>Messages</b>	<b>42</b>
10.1	Writing and Sending a New Message	42
10.1.1	Clearing Text Field	43
10.2	Saving a New Message in Outbox	43
10.3	Saving a New Message as a Template	43
10.4	Saving a Received Message as a Template	44
10.5	Sending Messages Using Templates	44
10.6	Reading a Message	45
10.7	Replying a Message	45
10.7.1	Reply Using an Empty Screen	45
10.7.2	Reply in Continuation of Original Text	46
10.7.3	Reply Using a Template	46
10.8	Forwarding a Message	47
10.9	Resending a Message	47
10.10	Erasing a Single Template	48
10.11	Erasing a Single Message	48
10.12	Erase All Read Messages from Inbox	48
10.13	Erase All Messages from Inbox	49
10.14	Erase All Messages from Outbox	49
10.15	Erase All Messages	49
<b>11</b>	<b>Status</b>	<b>51</b>
11.1	Silent	51
11.2	Headset	51
11.3	Auto Answer	51
11.4	Battery	51
11.5	Ringling Tone	52
11.6	Ringling Volume	52
<b>12</b>	<b>Bluetooth</b>	<b>53</b>
12.1	Turning Bluetooth On	53
12.2	Turning Bluetooth Off	53
12.3	Setting Up a Bluetooth Connection	53
12.4	Managing Active Units	54
12.4.1	Viewing List of Active Units	54
12.4.2	Disconnecting Active Units	54
12.4.3	Reconnecting Active Units	54
12.5	Managing Paired Units	54
12.5.1	Viewing List of Paired Units	54
12.5.2	Connecting Paired Units	55
12.5.3	Disconnecting Paired Units	55
12.5.4	Adding Call Name	55
12.5.5	Deleting Paired Units from List	55
12.5.6	Manual Approvals	56
12.6	Changing Phone Visibility	56

<b>13 Settings</b>	<b>57</b>
13.1 Ringing Volume	57
13.2 Ringing Tone	57
13.3 Alerting Volume	58
13.4 Vibrator	58
13.5 Silent Mode	58
13.5.1 Changing Settings of Silent Mode	59
13.6 Auto Key Lock	59
13.7 Backlight	60
13.7.1 Setting Backlight at Dimmed	60
13.7.2 Turning Backlight Off	60
13.7.3 Adjusting Backlight Delay	60
13.8 Auto Answer	61
13.8.1 Changing Settings of Auto Answer	61
13.9 Out of Range	62
13.9.1 Changing Settings of Out of Range	62
<b>14 Advanced Settings</b>	<b>63</b>
14.1 Phone/User ID	63
14.2 Language	63
14.3 Any Key Answer	63
14.4 Headset	63
14.4.1 Turning Alert of Headset On/Off	63
14.4.2 Adjusting Volume of Headset	64
14.5 Long Key	64
14.6 Login	64
14.6.1 Selecting a Login	65
14.6.2 Removing a Login	65
14.6.3 Creating a Login	65
14.6.4 Selecting Login Automatically	66
14.7 Time & Date	67
14.7.1 Change Time	67
14.7.2 Change Date	67
<b>15 External Services</b>	<b>68</b>
<b>16 General Information</b>	<b>69</b>
16.1 Troubleshooting	69
16.2 Information	69
16.2.1 Error information	69
16.2.2 Technical specification	69
16.2.3 International Regulatory and Product Information	70
16.2.4 Important Safety Instructions	70

# 1 Getting Started

Read all information in this section before you use your handset.

## 1.1 Handset Information

**Danger:** Ensure that the adapter voltage is the same as the electrical outlet voltage. The handset uses radio signals and does not guarantee a connection in all circumstances. Do not rely on a cordless handset to make emergency calls.

Never use your handset:

- in the vicinity of electrical detonators
- in shielded rooms
- in areas where radio transmission is forbidden
- in aircrafts

Do not place a handset near:

- water, moisture or damp areas
- heat sources, direct sunlight or unventilated areas
- devices which generate strong magnetic fields such as electrical appliances, fluorescent lamps, computers, radios, televisions or fax machines
- areas where the handset can be covered, its ventilation impaired, liquid spilled on the unit or objects inserted into the handset through any openings.
- areas with dust, vibration, shock or temperature extremes

Check for small metal objects in the handset earpiece/mouthpiece before using the handset.

Do not store or locate flammable liquids, gases, or explosive materials in the same compartment or vicinity as the cordless handset, its parts or accessories.

## 1.2 Charger Information

Two types of chargers can be used for the handset. An ordinary charger and a USB charger. The USB charger supports a PC phone book management

program, provided for the system administrator.

Location	Type	Part Number
USA	Ordinary charger	K84642472
Countries outside the USA	Ordinary charger	K84642464
USA	USB charger	K84642473
Countries outside the USA	USB charger	K84642466
USA	Power supply	K84642471
EU	Power supply	K84642469
UK	Power supply	K84642470
All	USB cable	K84718504

### 1.3 Battery Information

Read the following information before you handle the batteries:

- Do not leave a battery where it could be subjected to extremely high temperatures.
- Do not charge battery when the ambient room temperature is above 40°C or below 5°C.
- Do not replace batteries in potentially explosive environments, such as rooms where flammable liquids or gases are present.
- The battery will explode if disposed of in a fire.
- Do not charge batteries unless you use the approved charger and the proper batteries.

- Only use the original lithium battery type **K84743418 (ICP73048)** in the CH78 handset. Do not use these batteries with other products. These batteries were designed specifically for use with the CH78 handset and the CH78 charger **ONLY**. Improper use of the batteries may result in explosion and fire hazard. Do not do anything that would cause the battery to short circuit.
- Do not let battery or charger come into contact with conductive metal objects.
- Do not attempt to take battery apart.
- Power handset off before removing the battery.


## 1.4 Installing Battery

The battery is connected to the handset when it is shipped from the factory.

- 1 To change battery press down back cover and slide it towards the bottom of the handset.



- 2 Lift off back cover.
- 3 Place battery plug in slot in the battery box.

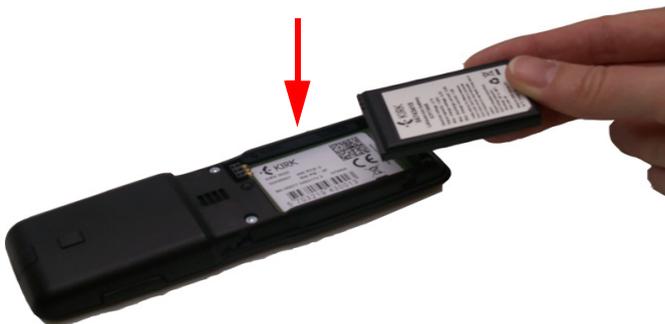

- 4 Insert battery with the label readable.

5 Press back cover back in locked position (when you hear a click the back cover is in position).

**Note:** The product label, including the CE logo, can be found in the battery compartment.

## 1.5 Charging Battery

When charging battery for the first time, it is necessary to leave handset in charger for 14-16 hours for the battery to be fully charged.

During normal operation, it takes approximately 6 hours to charge the handset from fully discharged to its full capacity. Turning the backlight off reduces charging time with approximately 2 hours (refer to [“Turning Backlight Off” on page 60](#)).

- Place handset in charger.



For correct charging, be sure the room temperature is between 0°C and 40°C. Do not place the handset in direct sunlight. The battery has a built-in heat sensor which will stop charging if the battery temperature is too high.

If the handset is turned off when placed in charger, nothing indicates the charging. There will be no reaction on incoming calls.

If the handset is turned on when charging, the display shows the blue charging icon  in the status bar. The charging icon is replaced by the green fully charged icon , when the battery is fully charged (when handset is removed from charger, the charging icon disappears). The Handset will not vibrate. Auto answer is inactive. The handset reacts normally for

incoming calls.

It is necessary to recharge battery when display shows the battery low icon , or if the handset cannot be turned on.

## 1.6 Battery Capacity

The capacity of the battery depends on the use of backlight and talk time.

Battery capacity in active mode:

- up to 24 hours of talk time.

Battery capacity in standby mode:

- 200 hours when backlight display is turned off.
- 100 hours when backlight display is set at dimmed.

For information about how to check battery capacity, refer to [“Battery” on page 51](#).


## 1.7 Battery Disposal

**Warning:** Lithium Ion batteries must be disposed of properly. Do not dispose of the batteries in office or household waste.

Lithium Ion batteries are recyclable. You can help preserve the environment by returning your unwanted batteries to your nearest recycling center for recycling or proper disposal.

Contact your system administrator for more information about battery disposal and recycling centers in your local area.

## 2 About Your CH78 Handset

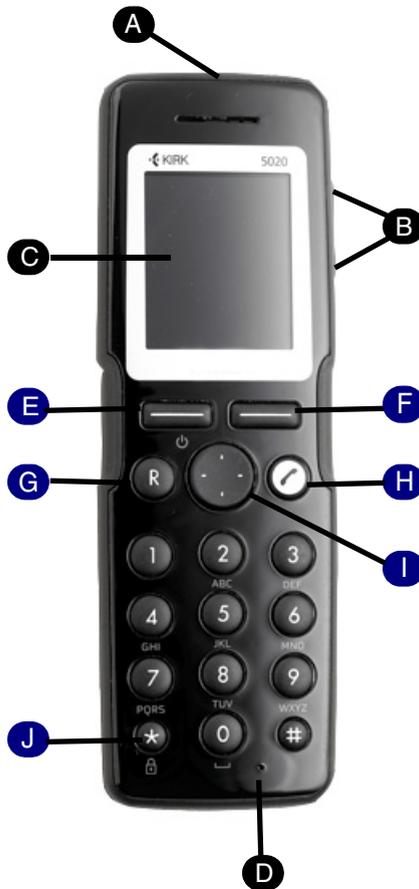

- A Headset Connector**
- B Volume Control**  
Adjusts speaker volume.
- C Display**  
Shows call information, handset status icons and guides you through option menus.
- D Microphone**

## **E** Left Softkey

**On hook (idle)** Enters main menu.  
**OR**  
On hook is the term used when handset is in standby mode.  
**OR**  
Confirms choices in menu.  
**OR**  
Turns handset off with a long (three second) key press.

**Off hook (active)** Mutes microphone.  
Off hook is the term used when handset is in active mode.

## **F** Right Softkey

**On hook (idle)** Returns to previous menu.  
**Off hook (active)** Turns loudspeaker on.

## **G** Redirect

**On hook (idle)** Exits menu.  
**Off hook (active)** Redirects calls.

## **H** On/off Hook

## **I** Four-Way Navigation Key

**On hook (idle)** Navigates menu.  
**OR**  
Adjusts volumes in menu.  
**OR**  
Moves cursor.  
**OR**  
Shortcuts to phone book, call register and missed call.  
**Off hook (active)** Becomes inactive.

## **J** Keypad Lock/Unlock

**On hook (idle)** Locks/unlocks keypad (Menu + \*).

### 2.1 Handset Display



The display is divided in three parts: **Status bar**, **Display center** and **Soft-key Text** (see figure above).

The types of information shown in Status bar when:

- on hook (idle) - display shows user ID, personal settings and time
- off hook - display shows user ID

The types of information shown in Display center when:

- on hook (idle) - display shows standby logo or call information when receiving an incoming call
- off hook - display shows a telephone icon

on page 60 for more information.

## 2.2 Navigating Handset

The main part of the functions of the handset are grouped into different menus. In the following sections you will find a description of how to navigate these menus. For more information about the content of the different menus, refer to “Using the Menu” on page 28.

You navigate the handset using two softkeys and a four-way navigation key. The figure below illustrates the connection between these keys and the text shown in display.



**Four-Way Navigation Key**  
Use the key to move around in menus. The four lines on the key illustrate the directions you move when pressing the key.

The handset also offers both personal and predefined shortcuts to selected functions in the menu. In the end of this chapter, you will find a section describing how to use these shortcuts.



The telephone icon will appear when the handset is off hook or a call is connected.



The envelope icon will appear when you receive a message.



The charging icon will appear when the handset is placed in charger.



The fully charged icon will appear when the battery is fully charged.



The key lock icon indicates that the entire keypad is locked.



The silent icon will appear when all sounds are disabled.



The loudspeaker icon will appear when loudspeaker is turned on.



The mute icon will appear when mic mute is turned on. Mic mute is an abbreviation of microphone mute.

### 2.1.2 Display Backlight

The display backlight automatically turns on when an incoming call or message arrives, or if a key is pressed.

The backlight turns off when the handset is idle after a preset period of time delay.

You can disable the backlight to save power, refer to ["Turning Backlight Off"](#)

on page 60 for more information.

## 2.2 Navigating Handset

The main part of the functions of the handset are grouped into different menus. In the following sections you will find a description of how to navigate these menus. For more information about the content of the different menus, refer to “Using the Menu” on page 28.

You navigate the handset using two softkeys and a four-way navigation key. The figure below illustrates the connection between these keys and the text shown in display.



The handset also offers both personal and predefined shortcuts to selected functions in the menu. In the end of this chapter, you will find a section describing how to use these shortcuts.

### 2.2.1 Entering Main Menu

- To enter main menu press left softkey to activate **Menu**.

### 2.2.2 Scrolling in Menus

- When in menu, press top or bottom of navigation key to scroll up and down in menu.

### 2.2.3 Confirming Choices

- When in the relevant menu, press left softkey to confirm your choices.  
Various terms are being used in the softkey text according to the context of the specific function.

### 2.2.4 Navigating Cursor

- When in the relevant menu, press left or right side of navigation key to move cursor from side to side.  
This is especially relevant when you are writing/editing words or entering/editing numbers and want to delete a letter or digit.
- To delete, simply place cursor behind letter or digit and press right softkey to activate **Delete**.

### 2.2.5 Adjusting Volumes

- When in the relevant menu, press left or right side of navigation key to adjust ringing and alerting volumes.
- Press left side to turn volume down, or press right side to turn volume up.

### 2.2.6 Returning to Previous Menu

- When in menu, press right softkey to activate **Back** or **Exit**. You now return to previous menu.

### 2.2.7 Leaving Menus

- To leave menu, press the **R** key. This key will exit menu at once.

### 2.2.8 Shortcuts

The handset contains two types of shortcuts:

- Personal shortcuts

Personal shortcuts consist of functions you have chosen to add to a list of shortcuts. The list is assigned to the right softkey.

- Predefined shortcuts

Predefined shortcuts are unchangeable and assigned to different keys on the handset.

### 2.2.8.1 Personal *Shortcuts*

By adding specific functions to the list of shortcuts, you get quick access to functions you often use.

**Note:** Personal shortcuts can only be used when handset is in standby mode (on hook).

In the following you will find a description of how to add, use and remove personal shortcuts.

To add a shortcut:

- 1 While on hook, press **Shortcut** to enter the shortcut function.
- 2 Scroll to **Edit shortcut** and press **Select**.
- 3 Scroll to the function, you want to make a shortcut to.
- 4 Press **Select** to add the function to the list of personal shortcuts.

To use a shortcut:

- 1 While on hook, press **Shortcut** to enter the shortcut function.
- 2 Scroll to the desired shortcut and press **Select**.

To remove a shortcut:

- 1 While on hook, press **Shortcut** to enter the shortcut function.
- 2 Scroll to **Edit shortcut** and press **Select**.
- 3 Scroll to the desired shortcut and press **Select** to remove the function from the list of shortcuts.

### 2.2.8.2 *Predefined Shortcuts:*

Predefined shortcuts are unchangeable and assigned to different keys.

In the following you will find a list of predefined shortcuts and a description of how to access and use them.

**Call list:** While on hook, press left side of navigation key to enter call list.

Incoming calls are illustrated with green arrows

Outgoing calls are illustrated with blue arrows

Missed calls are illustrated with red arrows

**Exit menu:** When in menu, press **R**.

**Find name:** While on hook, press top or bottom of navigation key.

Press bottom of navigation key to start at the top of name list with the letter a.

Press top of navigation key to start at the bottom of name list with the letter z.

**Keypad locked/unlocked:** While on hook, press **Menu** followed by **★** (Display shows the key lock icon  followed by the text **Keypad locked/unlocked**).

**Missed calls:** While on hook, press right side of navigation key to enter a list of missed call.

**Redirect a call:** While on a call, press **R**. The feature is system dependent.

**Save name and number:** While on hook, enter number and press **Save**.

**Silent on/off:** While on hook, press **Menu** followed by **#**. (Display shows the silent icon  followed by the text **Silent mode on/of**, and a small icon is placed in status line).

**Speed dial:** While on hook, press digit equivalent to number of the contact in the speed dial list continuously until call is started.

## 3 Basic Handset Options

### 3.1 Turning Handset On/Off

To turn handset on:

- Press left softkey to turn on handset.

To turn handset off:

**1** Press left softkey until the question 'Turn off?' appears in display.

**2** Press **Yes** to confirm.

**Note:** When you turn handset off, all content of call register and settings of time and date are deleted if the subscribed system does not resend the information to the handset.

### 3.2 Adjusting Speaker Volume

Adjusting speaker volume can only be done when handset is off hook. The handset will remember the speaker volume until you make a new adjustment.

During a telephone conversation you can adjust the speaker volume at any time in relation to the noise level of the surrounding environment.

Use key placed at the upper right side of handset for volume control.

To turn speaking volume up:

- While off hook, press top of key to turn up volume.

To turn speaker volume down:

- While off hook, press bottom of key to turn down volume.

### 3.3 Locking Keypad

Lock keypad to prevent keys from being accidentally pressed.

To lock/unlock keypad:

- Press **Menu** followed by **★** to lock/unlock keypad.

To answer a call when keypad is locked, press . When you end the call, the keypad automatically locks.

For automatic keypad lock, refer to ["Auto Key Lock" on page 59](#).

## 4 Making Calls

The handset must be subscribed and registered to make a call. For more information about subscribing, refer to [“Creating a Login” on page 65](#).

For internal calls, dial extension number. Contact your system administrator for a list of these extension numbers.

For external calls, dial external code (or line pool code) to access an external line, then dial external number. Contact your system administrator to confirm what external code or line pool code to use.

### 4.1 Dial Directly

- 1 Press  to make a call.
- 2 Dial number.
- 3 Press  to terminate the call.

### 4.2 On Hook Dialling (Pre-Dial)

- 1 Dial number.
- 2 Press  to make a call.
- 3 Press  to terminate the call.

### 4.3 Dial from Phone Book

The handset's phone book is familiar to an ordinary phone book. However, the find name function makes it easy to find a contact as you can jump directly to the desired contact using the quick search as described below.

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Phone Book** and press **Select**.
- 3 Scroll to **Find name** and press **Select**.
- 4 To find a name you can:
  - Scroll until you reach the desired name. To scroll through the names quickly press the navigation key continuously.
  - Use quick search by pressing the first letter(s) (max. 5 letters) of the desired name (refer to [“Using the Alphanumeric Keyboard” on page 32](#)).
- 5 Press , the display icon  appears until call is connected.
- 6 Press  again to terminate the call.

**Note:** For more information about using your phone book, refer to [“Phone Book” on page 32.](#)

## 4.4 Dial from Call List

Call list shows up to 40 of your latest incoming, outgoing and missed calls. When memory of call list is full, the handset will automatically erase the oldest call when a new call is received in call list.

- Incoming calls are illustrated with green arrows
- Outgoing calls are illustrated with blue arrows
- Missed calls are illustrated with red arrows

To dial from call list:

**1** While on hook, press left side of navigation key to enter call list.

**2** Scroll to the desired name or number and press .

**Note:** When you turn off the handset, all content of call list is deleted if the subscribed system does not resend the information to the handset.

## 4.5 Dial from Call Register

The call register menu stores up to 40 of your incoming, outgoing and missed calls. The calls are classified in three groups: incoming calls, outgoing calls and missed calls.

If memory of call register is full, the handset will automatically erase the oldest call when a new call is received in call register. If you want to delete calls from call register manually, refer to [“Delete” on page 40.](#)

To dial from call register:

**1** Press **Menu** to enter main menu.

**2** Scroll to **Call register** and press **Select**.

**3** Scroll to the desired list and press **Select**.

**4** Scroll to the desired name or number and press .

For more information about call register, refer to [“Call Register” on page 37.](#)

**Note:** When you turn off the handset, all content of call register is deleted if the subscribed system does not resend the information to the handset.

## 4.6 Redial

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Call register** and press **Select**.
- 3 Scroll to **Outgoing calls** and press **Select**.
- 4 Scroll to the desired name or number and press  .

## 4.7 Speed Dial

If you have assigned a number to one of the speed-dialing keys 0-9, do the following:

- While on hook, press digit equivalent to number of the contact in the speed dial list continuously until call is started.

**Note:** For more information about adding number to speed dial, refer to ["Adding to Speed Dial" on page 34](#).

## 5 Answering Calls

The handset must be subscribed and registered to answer a call. For more information about subscribing, refer to [“Creating a Login” on page 65](#).

When handset rings, display shows the icon for incoming calls  and the caller information appears below.

- Press  to answer a call when your handset rings.
- **Note:** You can distinguish between an internal and external call by the ring tone. The ring tone of an internal call is followed by three short beeps.

### 5.1 Auto Answer

When auto answer is turned on, the handset automatically goes off hook when an incoming call arrives.

If subscribed to a solution, the handset automatically goes on hook when calls are terminated.

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Settings** and press **Select**.
- 3 Scroll to **Auto answer** and press **Select**.
- 4 Scroll to **On** or **Off** and press **Change**.

**Note:** When charging, auto answer is inactive.

### 5.2 Mute a Call

- Press **Silence** and the ring signal is muted.

### 5.3 Reject a Call

- Press **Reject** to end the call. The rejected call is registered as a missed call.

### 5.4 Redirect a Call

Redirecting a call is system dependent. If supported by the system, do the following:

- 1 While on a call, press **R**.
- 2 Dial number of the person you want to redirect the call to and press **Ok**.

If you want to withdraw the call, press **R**.

**Note:** After redirecting the call, display will continue to show caller information.

## 6 During Calls

When you are on a call, you have two options as described in the following. Both options concern whether you want to make parts of a call public or personal. Note that it is possible to turn both options on at the same time.

### 6.1 Turning Loudspeaker On/Off

Turning loudspeaker on allows other people in the room to listen to and participate in the conversation. You may set the handset on a desk or table and leave your hands free.

To turn loudspeaker on/off:

- 1 While on a call, press **Loud on** to turn loudspeaker on.
- 2 To turn loudspeaker off, press **Loud off**.

### 6.2 Turning Microphone Mute On/Off

Turning microphone mute on will mute your voice. That is you can hear the other party but they cannot hear you.

- 1 While on a call, press **Mic Mute** to turn microphone mute on.
- 2 To turn microphone mute off, press **Mic on**.

## 7 Using the Menu

The handset offers a range of functions that are grouped into menus. The main menu consists of six menus: Phone Book, Call Register, Messages, Status, Settings and [External Services](#).

For more information about accessing and navigating the menu, refer to [“Navigating Handset” on page 17](#).

**Note:** If handset is in menu mode, and an incoming call arrives, then menu will be dropped and the call handled as usual.

### 7.1 Description of Menus

In the following you will find a short description of the six menus. For more information about a specific menu, see reference in the end of each description or [“List of Menu Functions” on page 29](#), which will give you a quick overview of the functions of each menu.

#### 7.1.1 Phone Book

You can store numbers and names in your phone book.

The phone book can store up to 250 names with up to four numbers each. A maximum of 24 letters, including spaces, is allowed for each name. Names are sorted alphabetically starting with their first character.

For more information about using phone book, refer to [“Phone Book” on page 32](#).

#### 7.1.2 Call Register

The call register keeps track of all your recent calls as it stores up to 40 of your incoming, outgoing and missed calls.

For more information about call register, refer to [“Call Register” on page 37](#).

#### 7.1.3 Messages

If supported by the system, you can send and receive messages from the messages menu.

All messages is automatically stored in inbox or outbox. Messages can store up to 20 messages. A maximum of 72 letters, including spaces, is allowed for each message.

For more information about reading, writing and sending messages, refer to [“Messages” on page 42](#).

## 7.1.4 Status

Status provides a quick overview of some of the handset settings and works as a shortcut, which makes it easy to change the basic settings according to your needs.

For more information about changing basic settings, refer to [“Status” on page 51](#).

## 7.1.5 Bluetooth

Bluetooth allows you to connect the handset to a compatible device (headset) with Bluetooth connectivity within 30 feet.

## 7.1.6 Settings

Settings offer you the opportunity to customize the handset according to your needs. The settings can be changed at any time.

For more information about customizing the handset, refer to [“Settings” on page 57](#) or [“Advanced Settings” on page 63](#).

## 7.1.7 External Services

External services are features placed in the main system.

For more information about the external services, refer to [“External Services” on page 68](#).

## 7.2 List of Menu Functions

In the following you will find a list of the different menu functions. The list gives a quick overview where to find the desired function of the handset.

### **Phone Book**

- 1 Find name
- 2 Add name/number
- 3 Speed dial
- 4 Delete

### **Call Register**

- 1 Incoming calls
- 2 Outgoing calls

**3** Missed calls

**4** Delete

## **Messages**

**1** New message

**2** Inbox

**3** Outbox

**4** Erase messages

**5** Templates

## **Status**

**1** Silent

**2** Headset

**3** Auto answer

**4** Battery

**5** Ring tone

**6** Ringing Volume

## **Bluetooth**

**1** Bluetooth On

**2** Bluetooth Off

**3** Search for units

**4** Active Units

**5** Paired Units

**6** Phone Visibility

## **Settings**

**1** Ringing volume

**2** Ringing tone

**3** Alerting volume

**4** Vibrator

**5** Silent mode

**6** Auto key lock

- 7 Backlight
- 8 Auto answer
- 9 Out of range

### **Advanced Settings**

- 1 Phone/UserID
- 2 Language
- 3 Any key answer
- 4 Headset
- 5 Long Key
- 6 Login
- 7 Time & Date

### **External Services**

## 8 Phone Book

You can store numbers and names in your phone book.

The phone book can store up to 250 names with four numbers each. A maximum of 24 digits, including spaces, is allowed for each number. Names are sorted alphabetically starting with their first character.

If the display shows **Memory full**, it is necessary to delete one or more names from the phone book (refer to [“Deleting Contact” on page 35](#)).

### 8.1 Using the Alphanumeric Keyboard

The normal dialling keys (0-9) are used for writing the name to be placed in the phone book. By pressing the keys a certain number of times the related letters will appear in the display.

Spaces are made by using the 0-key.

Key **★** changes between uppercase and lowercase letters, which is indicated on the top left-hand corner of the display.

Pressing left or right side of navigation key will move the cursor.

To delete letters, place cursor behind letter and press **Delete**.

### 8.2 Managing an Existing Contact

The phone book menu offers a range of possibilities to manage existing contacts and makes it easy to add, edit or delete name and number.

**Note:** It is possible to add up to four numbers to a contact.

#### 8.2.1 Finding Contact in Phone Book

The handset's phone book is familiar to an ordinary phone book. However, the find name function makes it easy to find a contact as you can jump directly to the desired contact using the quick search as described below.

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Phone Book** and press **Select**.
- 3 Scroll to **Find name** and press **Select**.

**4** To find a name you can:

- Scroll until you reach the desired name. To scroll through the names quickly press the navigation key continuously.
- Use quick search by pressing the first letter(s) (max. 5 letters) of the desired name (refer to [“Using the Alphanumeric Keyboard” on page 32](#)).

**Note:** It is also possible to reach phone book without entering menu using a shortcut (refer to [“Predefined Shortcuts:” on page 19](#)).

## 8.2.2 Dialing Contact from Phone Book

To dial from phone book, refer to [“Dial from Phone Book” on page 22](#).

## 8.2.3 Editing Name/Number

You can edit name and number of a contact in phone book at any time.

**1** Press **Menu** to enter main menu.

**2** Scroll to **Phone Book** and press **Select**.

**3** Scroll to **Find name** and press **Select**.

**4** To find a name you can:

- Scroll until you reach the desired name. To scroll through the names quickly press the navigation key continuously.
- Use quick search by pressing the first letter(s) (max. 5 letters) of the desired name (refer to [“Using the Alphanumeric Keyboard” on page 32](#)).

**5** Press **Details**.

**6** If more than one number: scroll to the desired number and press **Select**.

**7** Scroll to **Edit number/name** and press **Select**.

**8** Edit **Name** using the digits 2-9 (refer to [“Using the Alphanumeric Keyboard” on page 32](#)).

**9** Scroll to **Number** and edit number using the digits 0-9.

**10** Press **Save** to store your changes.

## 8.2.4 Adding New Number

You can add a new number to a contact in phone book at any time. It is possible to add up to four numbers to each contact.

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Phone Book** and press **Select**.
- 3 Scroll to **Find name** and press **Select**.
- 4 To find a name you can:
  - Scroll until you reach the desired name. To scroll through the names quickly press the navigation key continuously.
  - Use quick search by pressing the first letter(s) (max. 5 letters) of the desired name (refer to ["Using the Alphanumeric Keyboard" on page 32](#)).
- 5 Press **Details**.
- 6 If more than one number, press **Select**.
- 7 Scroll to **Add new number** and press **Select**.
- 8 Enter the new number using the digits 0-9 and press **Save**.
- 9 Repeat step 7-8 to add another number to the contact.

### 8.2.5 Adding to Speed Dial

You can assign a number to one of the speed-dialing keys 0-9. This way you only need to press a single digit to find name and number of the contact, you want to phone.

**Note:** A maximum of 10 speed dial numbers is allowed.

For more information about making a call using speed dial, refer to ["Speed Dial" on page 24](#).

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Phone Book** and press **Select**.
- 3 Scroll to **Find name** and press **Select**.
- 4 To find a name you can:
  - Scroll until you reach the desired name. To scroll through the names quickly press the navigation key continuously.
  - Use quick search by pressing the first letter(s) (max. 5 letters) of the desired name (refer to ["Using the Alphanumeric Keyboard" on page 32](#)).
- 5 Press **Details**.
- 6 If more than one number: scroll to the desired number and press **Select**.
- 7 Scroll to **Add to speed dial** and press **Select**.

**8** Scroll to the desired position and press **Add name**.

**9** If position is occupied, press **Yes** to replace existing speed dial.

### 8.2.6 Deleting Number

You can delete a single number at any time and still keep the rest of the belonging numbers of a contact. If you want to delete a contact and all belonging numbers, refer to [“Deleting Contact” on page 35](#).

**1** Press **Menu** to enter main menu.

**2** Scroll to **Phone Book** and press **Select**.

**3** Scroll to **Find name** and press **Select**.

**4** To find a name you can:

- Scroll until you reach the desired name. To scroll through the names quickly press the navigation key continuously.
- Use quick search by pressing the first letter(s) (max. 5 letters) of the desired name (refer to [“Using the Alphanumeric Keyboard” on page 32](#)).

**5** Press **Details**.

**6** If more than one number: scroll to the desired number and press **Select**.

**7** Scroll to **Delete number** and press **Select**.

**8** Press **Ok** to confirm.

### 8.2.7 Deleting Speed Dial

Use this function to delete a speed dial number, or replace it with a new speed dial when necessary. For more information about replacing a speed dial, refer to [“Adding to Speed Dial” on page 34](#).

**1** Press **Menu** to enter main menu.

**2** Scroll to **Phone Book** and press **Select**.

**3** Scroll to **Delete** and press **Select**.

**4** Scroll to **Speed dial number** and press **Select**.

**5** Press **Yes** to confirm.

### 8.2.8 Deleting Contact

Use the delete name and number function if you want to delete a contact and all the belonging numbers. If you only want to delete a single number

and keep the contact and the rest of the belonging numbers, refer to section 8.2.6. Deleting Number.

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Phone Book** and press **Select**.
- 3 Scroll to **Find name** and press **Select**.
- 4 To find a name you can:
  - Scroll until you reach the desired name. To scroll through the names quickly press the navigation key continuously.
  - Use quick search by pressing the first letter(s) (max. 5 letters) of the desired name (refer to [“Using the Alphanumeric Keyboard” on page 32](#)).
- 5 Press **Details**.
- 6 If more than one number, press **Select**.
- 7 Scroll to **Delete name/number** and press **Select**.
- 8 Press **OK** to confirm.

### 8.3 Adding New Contact

Use the add name/number function when you want to add a new contact to phone book.

**Note:** It is possible to add up to four numbers to a contact.

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Phone Book** and press **Select**.
- 3 Scroll to **Add name/number** and press **Select**.
- 4 Write the name of the contact using the digits 2-9 (refer to [“Using the Alphanumeric Keyboard” on page 32](#)).
- 5 Scroll to number and enter the number to be stored (max. 24 digits).
- 6 Press **Save** to store name and number.

**Note:** If display shows **Memory full**, it is necessary to delete one or more contacts from phone book (refer to [“Deleting Contact” on page 35](#)).

## 9 Call Register

The call register menu can store up to 40 of your incoming, outgoing and missed calls. Call register is divided into lists of: incoming calls, outgoing calls and missed calls.

If memory of call register is full, the handset will automatically erase the oldest call when a new call is received in call register. If you want to delete calls from call register manually, refer to [“Delete” on page 40](#).

**Note:** When you turn off the handset, all content of call register is deleted if the subscribed system does not resend the information to the handset.

### 9.1 Incoming Calls

Incoming call is a list of all your incoming calls sorted by date and time of the call, starting with the latest call.

If name and number of incoming call already exists in your phone book, the incoming call will be represented with the name of the contact. If name and number do not exist in your phone book, the handset cannot recognize the number and the incoming call will only be represented by the number.

In both cases, incoming call register provides details about incoming calls, such as time, date and length of conversation.

It is possible to add name and number of an incoming call to phone book or to delete an incoming call from the list.

#### 9.1.1 Viewing List of Incoming Calls

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Call Register** and press **Select**.
- 3 Scroll to **Incoming Calls** and press **Select**.

#### 9.1.2 Adding an Incoming Call to Phone Book

If you have an incoming call and the number is not in phone book it is possible to add it to phone book from the incoming call list.

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Call Register** and press **Select**.
- 3 Scroll to **Incoming Calls** and press **Select**.
- 4 Scroll to the desired call and press **Details**.

5 Press **Options**.

6 Scroll to **Add to phone book** and press **Select**

7 Write the name of the contact using the digits 2-9 (refer to [“Using the Alphanumeric Keyboard” on page 32](#)) and press **Save**.

### 9.1.3 Deleting an Incoming Call from List

1 Press **Menu** to enter main menu.

2 Scroll to **Call Register** and press **Select**.

3 Scroll to **Incoming Calls** and press **Select**.

4 Scroll to the desired call and press **Details**.

5 Press **Options** and scroll to **Delete from list**.

6 Press **Select** to confirm.

## 9.2 Outgoing Calls

Outgoing calls is a list of all your outgoing calls sorted by date and time of the call, starting with the latest call.

If name and number of the outgoing call already exists in your phone book, the outgoing call will be represented with the name of the contact. If name and number do not exist in your phone book, the handset can not recognize the number and the outgoing call will only be represented by the number.

In both cases, outgoing call register provides details about outgoing calls, such as time, date and length of conversation.

It is possible to add name and number of an outgoing call to your phone book, or to delete an outgoing call from the list.

### 9.2.1 Viewing List of Outgoing Calls

1 Press **Menu** to enter main menu.

2 Scroll to **Call Register** and press **Select**.

3 Scroll to **Outgoing Calls** and press **Select**.

### 9.2.2 Adding an Outgoing Call to Phone Book

If you have made a call and the number is not in phone book, it is possible to add it to phone book from the outgoing call list.

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Call Register** and press **Select**.
- 3 Scroll to **Outgoing Calls** and press **Select**.
- 4 Scroll to the desired call and press **Details**.
- 5 Press **Options**.
- 6 Scroll to **Add to phone book** and press **Select**.
- 7 Write the name of the contact using the digits 2-9 (refer to ["Using the Alphanumeric Keyboard" on page 32](#)) and press **Save**.

### 9.2.3 Deleting an Outgoing Call from List

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Call Register** and press **Select**.
- 3 Scroll to **Outgoing Calls** and press **Select**.
- 4 Scroll to the desired call and press **Details**.
- 5 Press **Options** and scroll to **Delete from list**.
- 6 Press **Select** to confirm.

## 9.3 Missed Calls

Missed calls is a list of all your missed calls sorted by date and time of the call, starting with the latest call.

If the name and number of the missed call already exists in your phone book, the missed call will be represented with the name of the contact. If the name and number do not exist in your phone book, the handset cannot recognize the number and the missed call will only be represented by the number.

In both cases, missed call register provides details about missed calls, such as time, date and length of conversation.

It is possible to add name and number of a missed call to your phone book or to delete a missed call from the list.

### 9.3.1 Viewing List of Missed Calls

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Call Register** and press **Select**.
- 3 Scroll to **Missed Calls** and press **Select**.

### 9.3.2 Adding a Missed Call to Phone Book

If you have a missed call and the number is not in phone book, it is possible to add it to phone book from the missed call list.

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Call Register** and press **Select**.
- 3 Scroll to **Missed Calls** and press **Select**.
- 4 Scroll to the desired missed call and press **Details**.
- 5 Press **Options**.
- 6 Scroll to **Add to phone book** and press **Select**.
- 7 Write the name of the contact using the digits 2-9 (refer to [“Using the Alphanumeric Keyboard” on page 32](#)) and press **Save**.

### 9.3.3 Deleting a Missed Call from List

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Call Register** and press **Select**.
- 3 Scroll to **Missed Calls** and press **Select**.
- 4 Scroll to the desired missed call and press **Details**.
- 5 Press **Options** and scroll to **Delete from list**.
- 6 Press **Select** to confirm.

## 9.4 Delete

The call register menu can store up to 40 of your incoming, outgoing and missed calls. If the memory of call register is full, the handset will automatically erase the oldest call when a new call need to be stored in the call register.

If you want to erase manually, use the following delete functions to empty lists in the call register.

### 9.4.1 Deleting All Incoming Calls

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Call Register** and press **Select**.
- 3 Scroll to **Delete** and press **Select**.
- 4 Scroll to **Incoming calls** and press **Select**.

5 Press **Yes** to empty list.

**Note:** If you only want to delete a single incoming call, see [“Deleting an Incoming Call from List” on page 38.](#)

#### 9.4.2 Deleting All Outgoing Calls

1 Press **Menu** to enter main menu.

2 Scroll to **Call Register** and press **Select**.

3 Scroll to **Delete** and press **Select**.

4 Scroll to **Outgoing calls** and press **Select**.

5 Press **Yes** to empty list.

**Note:** If you only want to delete a single outgoing call, see [“Deleting an Outgoing Call from List” on page 39.](#)

#### 9.4.3 Deleting All Missed Calls

1 Press **Menu** to enter main menu.

2 Scroll to **Call Register** and press **Select**.

3 Scroll to **Delete** and press **Select**.

4 Scroll to **Missed calls** and press **Select**.

5 Press **Yes** to empty list.

**Note:** If you only want to delete a single missed call, see [“Deleting a Missed Call from List” on page 40.](#)

#### 9.4.4 Deleting All Calls from All Lists

1 Press **Menu** to enter main menu.

2 Scroll to **Call Register** and press **Select**.

3 Scroll to **Delete** and press **Select**.

4 Scroll to **All calls** and press **Select**.

5 Press **Yes** to empty all folders.

# 10 Messages

If supported by the subscribed system, you can write, send and receive messages from the messages menu. You write messages using the alphanumeric keyboard. For more information, refer to ["Using the Alphanumeric Keyboard" on page 32](#).

All messages are automatically stored in inbox or outbox.

The inbox is a list of all received messages, while outbox is a list of all sent messages. Both lists are sorted by time and date, starting with the latest.

If the name and number of the message already exists as a contact in your phone book, the message in the inbox or outbox will be represented with the name of the contact. If the name and number do not exist in your phone book, the handset cannot recognize the number and the message will only be represented by the number.

If you save a message in outbox for later handling, the message will be represented by the beginning of the text message.

Inbox and outbox can store up to 20 messages in total. A maximum of 72 letters, including spaces, is allowed for each message.

If the memory of inbox and outbox is full, the handset will automatically erase the oldest message when a new message needs to be stored.

If you want to delete messages from inbox or outbox manually, refer to ["Erasing a Single Message" on page 48](#), ["Erase All Read Messages from Inbox" on page 48](#), ["Erase All Messages from Inbox" on page 49](#), ["Erase All Messages from Outbox" on page 49](#) and ["Erase All Messages" on page 49](#).

## 10.1 Writing and Sending a New Message

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Messages** and press **Select**.
- 3 Scroll to **New message** and press **Select**.
- 4 Write a message.
- 5 Optionally, you can use a template: Press **Options**, scroll to **Use template**, press **Select**, scroll to desired template, press **Options**, scroll to **Select** and press **Select**. For more information about templates, refer to ["Saving a New Message as a Template" on page 43](#) or ["Saving a Received Message as a Template" on page 44](#), ["Sending Messages Using Templates" on page 44](#) and ["Erasing a Single Template" on page 48](#).

**6** Press **Options** and scroll to **Send**.

**7** Press **Options** and then press **Search** to find the receiver.

**8** To find a name you can:

- Scroll until you reach the desired name. To scroll through the names quickly press the navigation key continuously.
- Use quick search by pressing the first letter(s) (max. 5 letters) of the desired name (refer to ["Using the Alphanumeric Keyboard" on page 32](#)).

**9** Press **Select** and then press **Send**.

**10** When the message has been sent, the envelope icon  will appear followed by the text 'Msg send to ext. device'. Accept with **Ok**.

### 10.1.1 Clearing Text Field

Use the clear text function, when your are writing a new message and want to start all over.

**1** Press **Options**.

**2** Scroll to **Clear text** and press **Select**.

### 10.2 Saving a New Message in Outbox

You can write a message and then save it in outbox for later handling.

**1** Press **Menu** to enter main menu.

**2** Scroll to **Messages** and press **Select**.

**3** Scroll to **New message** and press **Select**.

**4** Write a message and press **Options**.

**5** Scroll to **Save message** and press **Select**.

**6** Scroll to **Outbox** and press **Select**.

### 10.3 Saving a New Message as a Template

After writing a message you can save it as a template for later use.

**1** Press **Menu** to enter main menu.

**2** Scroll to **Messages** and press **Select**.

**3** Scroll to **New message** and press **Select**.

**4** Write a message and press **Options**.

- 5 Scroll to **Save message** and press **Select**.
- 6 Scroll to **Templates** and press **Select**.
- 7 If memory is full: press **Ok**.
- 8 Scroll to the desired position and press **Select**.

## 10.4 Saving a Received Message as a Template

You can save a message from inbox as a template for later use.

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Messages** and press **Select**.
- 3 Scroll to **Inbox** and press **Select**.
- 4 Scroll to desired message and press **Select**.
- 5 Press **Options**.
- 6 Scroll to **Save message/Template (??)** and press **Select**.

## 10.5 Sending Messages Using Templates

You can create up to 10 templates in relation to the kind of message you often need to send. To create a new template, refer to [“Saving a New Message as a Template” on page 43](#) and [“Saving a Received Message as a Template” on page 44](#).

When using a template in a message you have two options:

- Use a template from the very beginning of the process (see below)
- Insert a template in a message when you are in the process of writing a message (refer to [“Writing and Sending a New Message” on page 42](#)).

To use a template in a message:

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Messages** and press **Select**.
- 3 Scroll to **Templates** and press **Select**.
- 4 Scroll to the desired template and press **Option**.
- 5 Scroll to **Select** and press **Select**.
- 6 If relevant, write additional text.
- 7 Press **Options**.
- 8 Scroll to **Send** and press **Select**.

**9** Press **Search** to find the receiver.

**10** To find a name you can:

- Scroll until you reach the desired name. To scroll through the names quickly press the navigation key continuously.
- Use quick search by pressing the first letter(s) (max. 5 letters) of the desired name (refer to [“Using the Alphanumeric Keyboard” on page 32](#)).

**11** Press **Select** and then press **Send**.

## 10.6 Reading a Message

The envelope icon  appears on handset display, when you receive a new message. To read the message, do the following:

**1** Press **Menu** to enter main menu.

**2** Scroll to **Messages** and press **Select**.

**3** Scroll to **Inbox** and press **Select**.

**4** Scroll to the desired message and press **Select**. Time and date of message is shown above the text message.

**Note:** New messages appear in the beginning of the list as they are sorted by time and date, starting with the latest.

## 10.7 Replying a Message

When you want to reply a message from your inbox, you have three options:

- Write a new message in an empty screen.
- Write in continuation of original text (received message).
- Insert a template.

### 10.7.1 Reply Using an Empty Screen

**1** Press **Menu** to enter main menu.

**2** Scroll to **Messages** and press **Select**.

**3** Scroll to **Inbox** and press **Select**.

**4** Scroll to the desired received message and press **Select**.

**5** Press **Options**.

**6** Scroll to **Reply** and press **Select**.

- 7 Scroll to **Empty screen** and press **Select**.
- 8 Write a message and press **Options**.
- 9 Scroll to **Send** and press **Select**.
- 10 Press **Send**.

#### 10.7.2 Reply in Continuation of Original Text

**Note:** Original text refers to the received text message.

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Messages** and press **Select**.
- 3 Scroll to **Inbox** and press **Select**.
- 4 Scroll to the desired received message and press **Select**.
- 5 Press **Options**.
- 6 Scroll to **Reply** and press **Select**.
- 7 Scroll to **Original text** and press **Select**.
- 8 Write a message in continuation of received message and press **Options**.
- 9 Scroll to **Send** and press **Select**.
- 10 Press **Send**.

#### 10.7.3 Reply Using a Template

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Messages** and press **Select**.
- 3 Scroll to **Inbox** and press **Select**.
- 4 Scroll to the desired message and press **Select**.
- 5 Press **Options**.
- 6 Scroll to **Reply** and press **Select**.
- 7 Scroll to **Template** and press **Select**.
- 8 Scroll to the desired template and press **Options**.
- 9 Scroll to **Select** and press **Select**.
- 10 If relevant, write additional text.
- 11 Press **Options**.
- 12 Scroll to **Send** and press **Select**.
- 13 Press **Send**.

## 10.8 Forwarding a Message

If you want to forward a message to a contact, do the following:

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Messages** and press **Select**.
- 3 Scroll to **Inbox** and press **Select**.
- 4 Scroll to the desired received message and press **Select**.
- 5 Press **Options**.
- 6 Scroll to **Forward** and press **Select**.
- 7 Press **Send** and then press **Search**.
- 8 To find a name you can:
  - Scroll until you reach the desired name. To scroll through the names quickly press the navigation key continuously.
  - Use quick search by pressing the first letter(s) (max. 5 letters) of the desired name (refer to [“Using the Alphanumeric Keyboard” on page 32](#)).
- 9 Press **Select** and then press **Send**.

## 10.9 Resending a Message

If you want to resend a message to a contact, do the following:

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Messages** and press **Select**.
- 3 Scroll to **Outbox** and press **Select**.
- 4 Scroll to the desired message and press **Select**.
- 5 Press **Options**.
- 6 Scroll to **Resend** and press **Select**.
- 7 Press **Options**.
- 8 Scroll to **Send** and press **Search** to find the receiver.

9 To find a name you can:

- Scroll until you reach the desired name. To scroll through the names quickly press the navigation key continuously.
- Use quick search by pressing the first letter(s) (max. 5 letters) of the desired name (refer to [“Using the Alphanumeric Keyboard” on page 32](#)).

10 Press **Select** and then press **Send**.

## 10.10 Erasing a Single Template

Use this function to delete a template, or replace the template with a new template when the memory is full. For more information about replacing a template, refer to [“Saving a New Message as a Template” on page 43](#).

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Messages** and press **Select**.
- 3 Scroll to **Templates** and press **Select**.
- 4 Scroll to the desired template and press **Options**.
- 5 Scroll to **Erase** and press **Select**.
- 6 Press **Yes** to erase the template.

## 10.11 Erasing a Single Message

The handset will automatically erase the oldest message when the memory of inbox and outbox is full (refer to [“Messages” on page 42](#)).

If you want to delete a message manually, do the following:

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Messages** and press **Select**.
- 3 Scroll to **Inbox** or **Outbox** and press **Select**.
- 4 Scroll to the desired message and press **Select**.
- 5 Press **Options**.
- 6 Scroll to **Erase** and press **Select**.
- 7 Press **Yes** to erase the message.

## 10.12 Erase All Read Messages from Inbox

Use this function to erase all read messages from inbox. This way you do not risk erasing messages that you have not had time to read yet.

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Messages** and press **Select**.
- 1 Scroll to **Erase messages** and press **Select**.
- 2 Scroll to **All read** and press **Select**.
- 3 Press **Yes** to erase all read messages from inbox.

### 10.13 Erase All Messages from Inbox

Use this function to erase all messages from inbox.

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Messages** and press **Select**.
- 3 Scroll to **Erase messages** and press **Select**.
- 4 Scroll to **Inbox** and press **Select**.
- 5 Press **Yes** to erase all messages from inbox.

**Note:** If you only want to erase a single message from inbox, refer to ["Erasing a Single Message" on page 48](#).

### 10.14 Erase All Messages from Outbox

Use this function to erase all messages from your outbox.

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Messages** and press **Select**.
- 3 Scroll to **Erase messages** and press **Select**.
- 4 Scroll to **Outbox** and press **Select**.
- 5 Press **Yes** to erase all messages from outbox.

**Note:** If you only want to erase a single message from the outbox, see ["Erasing a Single Message" on page 48](#).

### 10.15 Erase All Messages

Use this function to erase all messages from inbox and outbox. If you want to be sure not to erase unread messages, refer to ["Erase All Read Messages from Inbox" on page 48](#).

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Messages** and press **Select**.
- 3 Scroll to **Erase messages** and press **Select**.

4 Scroll to **All** and press **Select**.

5 Press **Yes** to erase all messages from all folders.

## 11 Status

The status menu provides an overview of some of the handset settings and works as a shortcut to these making it easy to change the settings according to your needs. The status menu also provide information about battery capacity.

In the following you will find a description of the settings to be found in the status menu.

### 11.1 Silent

When silent mode is turned on, the handset will not ring when a call arrives. However, you will still be able to see the arriving call on the handset display.

For more information about changing settings for silent mode, refer to [“Silent Mode” on page 58](#).

### 11.2 Headset

Using headset allows you to keep up your activities and use the phone at the same time.

For more information about changing settings for headset, refer to [“Headset” on page 63](#).

### 11.3 Auto Answer

When auto answer is turned on, the handset automatically goes off hook when ringing.

If subscribed to a solution, the handset automatically goes on hook when calls are terminated.

For more information about changing settings for auto answer, refer to [“Auto Answer” on page 61](#).

### 11.4 Battery

The battery function shows remaining battery capacity.

The indication on the display is not necessarily an exact reflection of the remaining speech time, but only an indication of the voltage on the battery.

To check remaining battery capacity:

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Status** and press **Select**.
- 3 Scroll to **Battery** to view remaining capacity.

## 11.5 Ringing Tone

The ring tone is followed by a number indicating the chosen tone of the ringer.

You can distinguish between an internal and external call by the ring tone. The ring tone of an internal call is followed by three short beeps.

For more information about changing ring tone, refer to [“Ringing Tone” on page 57](#).

## 11.6 Ringing Volume

Adjusts ringing volume according to the noise level of the surrounding environment.

For more information about adjusting ringing volume, refer to [“Ringing Volume” on page 57](#).

## 12 Bluetooth

Bluetooth technology allows you to connect the handset to a compatible device with Bluetooth connectivity within 30 feet (10 meters).

### 12.1 Turning Bluetooth On

To use Bluetooth technology, you must turn Bluetooth on.

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Bluetooth** and press **Select**.
- 3 Scroll to **On** and press **Select**.

Se turning off - ekstra trin

### 12.2 Turning Bluetooth Off

When Bluetooth is turned off, you will still be able to view a list of **active units / paired devices** (refer to...!!)

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Bluetooth** and press **Select**.
- 3 Scroll to **Off** and press **Select**.
- 4 Press **Yes** to disconnect units.

### 12.3 Setting Up a Bluetooth Connection

When setting up a Bluetooth connection, you will need to search for compatible devices with Bluetooth connectivity. To connect with a device, you will also need a password of 1-16 numeric characters. The first time you try to connect the devices, you must enter the password. Once the devices are connected, you will not need to use the password again, so there is no need to remember it.

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Bluetooth** and press **Select**.
- 3 Scroll to **Search for units** and press **Select** to start searching.
- 4 If units are already connected, press **Ok** to disconnect the units before searching for new units.
- 5 Scroll to desired unit among the search results of available units and press **Select**.
- 6 Enter Bluetooth password to connect with the unit and press **Ok**.

## 12.4 Managing Active Units

### 12.4.1 Viewing List of Active Units

The list of active units shows the devices, you are connected to???

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Bluetooth** and press **Select**.
- 3 Scroll to **Active units** and press **Select**.

### 12.4.2 Disconnecting Active Units

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Bluetooth** and press **Select**.
- 3 Scroll to **Active units** and press **Select**.
- 4 Scroll to the desired unit and press **Options**.
- 5 Scroll to **Disconnect** and press **Ok**.

### 12.4.3 Reconnecting Active Units

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Bluetooth** and press **Select**.
- 3 Scroll to **Active units** and press **Select**.
- 4 Scroll to the desired unit and press **Options**.
- 5 Scroll to **Reconnect** and press **Ok**.

## 12.5 Managing Paired Units

You can set up a permanent connection (pairing) between your handset and another device with Bluetooth connectivity.

### 12.5.1 Viewing List of Paired Units

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Bluetooth** and press **Select**.
- 3 Scroll to **Paired units** and press **Select**.

Units som er afkrydset betyder...??

## 12.5.2 Connecting Paired Units

Before you can use paired units, you will need to establish a connection to the unit. When the unit is connected, it will appear as an active unit (refer to "Viewing List of Active Units" on page 54). - Er det korrekt?

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Bluetooth** and press **Select**.
- 3 Scroll to **Paired units** and press **Select**.
- 4 Scroll to the desired unit and press **Options**.
- 5 Scroll to **Connect** and press **Select**.

## 12.5.3 Disconnecting Paired Units

You can disconnect paired units and save them for later use.

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Bluetooth** and press **Select**.
- 3 Scroll to **Paired units** and press **Select**.
- 4 Scroll to the desired unit and press **Options**.
- 5 Scroll to **Disconnect** and press **Select**.

## 12.5.4 Adding Call Name

You can add a call name to the paired unit - synligt for hvem?

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Bluetooth** and press **Select**.
- 3 Scroll to **Paired units** and press **Select**.
- 4 Scroll to the desired unit and press **Options**.
- 5 Scroll to **Add call name** and press **Select**.
- 6 Press **Ok** to add the call name.

## 12.5.5 Deleting Paired Units from List

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Bluetooth** and press **Select**.
- 3 Scroll to **Paired units** and press **Select**.
- 4 Scroll to the desired unit and press **Options**.

5 Scroll to **Delete from list** and press **Select**.

6 Press **Yes** to confirm.

### 12.5.6 Manual Approvals

1 Press **Menu** to enter main menu.

2 Scroll to **Bluetooth** and press **Select**.

3 Scroll to **Paired units** and press **Select**.

4 Scroll to the desired unit and press **Options**.

5 Scroll to **Manual approval** and press **Select**.

6 Scroll to **On** or **Off** and press **Ok**.

### 12.6 Changing Phone Visibility

You can choose to visibility: shows the handset to all other devices with bluetooth connectivity or Invisibility to show the handset only to the paired devices.

1 Press **Menu** to enter main menu.

2 Scroll to **Bluetooth** and press **Select**.

3 Scroll to **Paired units** and press **Select**.

4 Scroll to the desired unit and press **Options**.

5 Scroll to **Phone Visibility** and press **Select**.

6 Scroll to **Visible** or **Invisible** and press **Change**.

## 13 Settings

The setting menu offers you the opportunity to customize the handset according to your needs. The settings can be changed at any time. The setting menu consists of: ringing volume, ringing tone, alerting volume, vibrator, silent mode, auto key lock, backlight, auto answer, out of range and advanced settings.

**Note:** Advanced settings are described separately in the next chapter.

In the following you will find a description of how to customize the handset.

### 13.1 Ringing Volume

To adjust the volume of the ring tone:

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Settings** and press **Select**.
- 3 Scroll to **Ringing volume** and press **Select**.
- 4 Press left or right side of navigation key to adjust the volume of the ring tone.
- 5 Press **Set** and then press **Back**.

### 13.2 Ringing Tone

The ring tone is followed by a number indicating the chosen tone of the ringer.

You can distinguish between an internal and external call by the ring tone. The ring tone of an internal call is followed by three short beeps.

To choose a new ring tone:

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Settings** and press **Select**.
- 3 Scroll to **Ringing tone** and press **Select**.
- 4 Scroll to the desired ring tone and press **Change** to select and listen to the chosen ring tone. Repeat the process if you want to choose and listen to other ring tones.
- 5 Press **Back** when you have selected the desired ring tone.

## 13.3 Alerting Volume

Alerts are short beeps that appear when:

- You receive a new message.
- You send a message.
- The handset is moving out of range.
- The handset is out of range.
- The battery capacity is low.
- You create a login.

To adjust alerting volume:

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Settings** and press **Select**.
- 3 Scroll to **Alerting volume** and press **Select**.
- 4 Press the left or right side of the navigation key to adjust the volume of the ringer.
- 5 Press **Set** and then press **Back**.

## 13.4 Vibrator

When vibrator is turned on, the handset will vibrate when an incoming call or message arrives.

To turn vibrator on/off:

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Settings** and press **Select**.
- 3 Scroll to **Vibrator** and press **Select**.
- 4 Scroll to **On** or **Off** and press **Change**.

**Note:** When charging, handset will not vibrate.

## 13.5 Silent Mode

When silent mode is turned on, the handset will not ring when a call arrives. However, you will still be able to see the arriving call on the handset display.

To turn silent mode on/off:

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Settings** and press **Select**.

**3** Scroll to **Silent mode** and press **Select**.

**4** Scroll to **On** or **Off** and press **Change**.

**Note:** It is also possible to turn Silent mode on or off without entering menu. While on hook, press **Menu** followed by **#**.

### 13.5.1 Changing Settings of Silent Mode

When silent mode is turned on, you can select other ways of indicating incoming calls or messages:

- Display flashing

When turned on, the display will flash when an incoming call or message arrives.

- Vibrator

When turned on, the handset will vibrate when an incoming call or message arrives.

- Short ring

When turned on, a short ring will appear when an incoming call arrives.

To change settings of silent mode:

**1** Press **Menu** to enter main menu.

**2** Scroll to **Settings** and press **Select**.

**3** Scroll to **Silent Mode** and press **Select**.

**4** Scroll to **Settings** and press **Change**.

**5** Scroll to the desired setting and press **Select**.

### 13.6 Auto Key Lock

Use auto key lock to prevent keys from being accidentally pressed.

With auto keylock turned on the handset will automatically lock keypad after 60 seconds. To manually lock/unlock keypad, press **Menu** followed by **\***.

To turn auto key lock on/off:

**1** Press **Menu** to enter main menu.

**2** Scroll to **Settings** and press **Select**.

**3** Scroll to **Auto key lock** and press **Select**.

**4** Scroll to **On** or **Off** and press **Change**.

To answer a call when auto key lock is on, press  . When you end the call, keypad automatically locks.

## 13.7 Backlight

The display backlight automatically turns on when an incoming call or message arrives, or a key is pressed.

The backlight turns off when handset is in standby mode after a preset period of time delay.

### 13.7.1 Setting Backlight at Dimmed

When setting display backlight at dimmed, display information can still be seen vaguely when handset is in standby mode.

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Settings** and press **Select**.
- 3 Scroll to **Backlight** and press **Select**.
- 4 Scroll to **Dimmed** and press **Set**.

### 13.7.2 Turning Backlight Off

Turning display backlight off when handset is in standby mode will save battery power.

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Settings** and press **Select**.
- 3 Scroll to **Backlight** and press **Select**.
- 4 Scroll to **Off** and press **Set**.

### 13.7.3 Adjusting Backlight Delay

You can adjust the period of time before backlight turns off when handset is in standby mode.

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Settings** and press **Select**.
- 3 Scroll to **Backlight** and press **Select**.
- 4 Scroll to **Delay** and press **Set**.
- 5 Press left and right side of navigation key to adjust backlight delay.

6 Press **Set** and then press **Back**.

## 13.8 Auto Answer

When auto answer is turned on, the handset automatically goes off hook when an incoming call arrives.

If subscribed to a solution, the handset automatically goes on hook when calls are terminated.

To turn auto answer on/off:

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Settings** and press **Select**.
- 3 Scroll to **Auto answer** and press **Select**.
- 4 Scroll to **On** or **Off** and press **Change**.

**Note:** When charging, auto answer is inactive.

### 13.8.1 Changing Settings of Auto Answer

When auto answer is turned on, you can select different situations where to use auto answer.

Settings of auto answer are:

- Lift from charg.  
When turned on, the handset automatically goes off hook when removed from charger.
- After 1. ring  
When turned on, the handset automatically goes off hook after the first ring.
- When headset  
When turned on, the handset automatically goes off hook, when you are using a headset.
- Loadspeaker on  
When turned on, the handset automatically goes off hook and turns on loadspeaker.

To change settings of auto answer:

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Settings** and press **Select**.

- 3 Scroll to **Auto answer** and press **Select**.
- 4 Scroll to **Settings** and press **Change**.
- 5 Scroll to the desired setting and press **Select**.

## 13.9 Out of Range

The out of range indicator appears when handset is moving out of or already is out of range of base station.

**Note:** When the handset has been outside the coverage area, it can take up to 30 seconds before the handset is back on the system after re-entering coverage area.

To turn auto answer on/off:

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Settings** and press **Select**.
- 3 Scroll to **Out of range** and press **Select**.
- 4 Scroll to **On** or **Off** and press **Change**.

### 13.9.1 Changing Settings of Out of Range

The handset offers two types of out of range alerts:

- Icon only
- Tone (beep) + icon

With the out of range indicator turned on:

- If handset is moving out of range, the low signal icon  will appear in display.
- If the handset gets out of range, the no signal icon  will appear in display. If tone + icon is selected, beeps will appear with short intervals as long as the handset is out of range.

To change the settings:

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Settings** and press **Select**.
- 3 Scroll to **Out of range** and press **Select**.
- 4 Scroll to **Settings** and press **Change**.
- 5 Scroll to the desired alert and press **Select**.

## 14 Advanced Settings

In the setting menu it is also possible to define the following advanced settings: language, any key answer, headset, long key, login and time and date.

### 14.1 Phone/User ID

Information about the firmware version provided for the system administrator.

### 14.2 Language

There are *X antal* predefined languages in the handset: English, Danish, Spanish and *XXX*.

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Settings** and press **Select**.
- 3 Scroll to **Advanced** and press **Select**.
- 4 Scroll to **Language** and press **Select**.
- 5 Scroll to the desired language and press **Select**.

### 14.3 Any Key Answer

When turned on, you can answer a call by pressing any key.

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Settings** and press **Select**.
- 3 Scroll to **Advanced** and press **Select**.
- 4 Scroll to **Any key answer** and press **Select**.
- 5 Scroll to **On** or **Off** and press **Change**.

### 14.4 Headset

Using headset allows you to keep up your activities and use the phone at the same time.

#### 14.4.1 Turning Alert of Headset On/Off

When the alert of headset is turned off, only the handset will ring when a call arrives.

When the alert of headset is turned on, you can also hear the ring tone in

your headset when a call arrives.

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Settings** and press **Select**.
- 3 Scroll to **Advanced** and press **Select**.
- 4 Scroll to **Headset** and press **Select**.
- 1 Scroll to **Alert on** or **Alert off** and press **Change**.

#### 14.4.2 Adjusting Volume of Headset

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Settings** and press **Select**.
- 3 Scroll to **Advanced** and press **Select**.
- 4 Scroll to **Headset** and press **Select**.
- 5 Scroll to **Headset** volume and press **Change**.
- 6 Press left or right side of the navigation key to adjust volume.
- 7 Press **Set** and then press **Back**.

#### 14.5 Long Key

The long key function supports system features and defines a long key press to digits between 0-9. The long key press can be defined as speed dials or as MSF messages. MSF messages are system dependent. If supported by the system, a MSF message sent to the system could for example return system features to the handset.

To change long key definition:

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Settings** and press **Select**.
- 3 Scroll to **Advanced** and press **Select**.
- 4 Scroll to **Long key** and press **Select**.
- 5 Scroll to desired definition and press **Change**.

#### 14.6 Login

Before you can use the registered handset it is necessary to subscribe the handset to a system (login). The handset can be subscribed to up to 10 different systems. To subscribe to a system, refer to [“Creating a Login” on](#)

### 14.6.1 Selecting a Login

If you want to change to another system manually, do the following:

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Settings** and press **Select**.
- 3 Scroll to **Advanced** and press **Select**.
- 4 Scroll to **Login** and press **Select**.
- 5 Scroll to **Select Login** and press **Select**.
- 6 Scroll to the desired login and press **Select**.

### 14.6.2 Removing a Login

Logins can be removed from the system in use and from the 9 other systems (if connected).

**Note:** Removing a login requires a password. Password is factory set at 0000.

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Settings** and press **Select**.
- 3 Scroll to **Advanced** and press **Select**.
- 4 Scroll to **Login** and press **Select**.
- 5 Scroll to **Remove login** and press **Select**.
- 6 Scroll to the desired login and press **Select**.
- 7 Enter your password and press **Ok**.

**Note:** If the system in use is removed, it is necessary to select one of the remaining systems or to subscribe to a new one.

**Note:** If one of the systems not chosen is removed, the handset remains connected to the system in use.

### 14.6.3 Creating a Login

To create a login, the system must allow subscriptions to be made. Some systems also require an Authentication Code (AC). If more than one system currently permits subscription, you will need to know the ID of the system to which you want to subscribe. Authentication Codes and system ID's will be provided by the system administrator.

You can subscribe up to 10 systems, that is create 10 logins.

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Settings** and press **Select**.
- 3 Scroll to **Advanced** and press **Select**.
- 4 Scroll to **Login** and press **Select**.
- 5 Scroll to **Create login** and press **Select**. The handset will start searching for a system.
- 6 Scroll to the found system and press **Select**.
- 7 Enter an AC Code and press **Ok** to connect to the system.
- 8 Press **Ok**.

**Note:** If the handset is already subscribed to 10 systems, you will have to remove a subscription before creating a new subscription (refer to [“Removing a Login” on page 65](#)).

#### 14.6.4 Selecting Login Automatically

When auto login is turned on, the handset automatically change to another system when necessary. Auto login should only be used when systems are separate, with no overlaps.

**Note:** To activate auto login your handset must be subscribed to at least two systems.

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Settings** and press **Select**.
- 3 Scroll to **Advanced** and press **Select**.
- 4 Scroll to **Login** and press **Select**.
- 5 Scroll to **Auto login** and press **Select**.
- 6 If **Off** is selected, press **Change** to select **On**.

The handset automatically selects a system. The selected system is marked with an A.

## 14.7 Time & Date

It is possible to customize the format of time and date.

### 14.7.1 Change Time

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Settings** and press **Select**.
- 3 Scroll to **Advanced** and press **Select**.
- 4 Scroll to **Time & date** and press **Select**.
- 5 Scroll to **Change time** and press **Select**.
- 6 *Choose time format..... - vent til implementeret*
- 7 Place the cursor on the digit, you want to change.
- 8 Press a digit. The cursor will then automatically jump to the next digit.
- 9 Press **Change**.

**Note:** When you turn off the handset, the settings of time are deleted if the subscribed system does not resend the information to the handset.

### 14.7.2 Change Date

- 1 Press **Menu** to enter main menu.
- 2 Scroll to **Settings** and press **Select**.
- 3 Scroll to **Advanced** and press **Select**.
- 4 Scroll to **Time & date** and press **Select**.
- 5 Scroll to **Change date** and press **Select**.
- 6 *Choose date format ...- vent til implementeret*
- 7 Place the cursor on the digit, you want to change.
- 8 Press a digit. The cursor will then automatically jump to the next digit.
- 9 Press **Change**.

**Note:** When you turn off the handset, the settings of date are deleted if the subscribed system does not resend the information to the handset.

## 15 External Services

External services are features placed in the main system. These may vary from system to system. Please consult your system administrator for supported features.

## 16 General Information

### 16.1 Troubleshooting

**The handset freezes.**

Remove and replace battery pack. Press left softkey to turn on the handset.

**The handset does not ring.**

Check whether **Silent mode** is turned **On**.

**The handset cannot find a system ID at Create Login.**

Check whether the system is set to allow subscriptions.

**The handset cannot subscribe even if system ID has been found.**

Check if Authentication Code is necessary.

**Not possible to turn on the handset.**

Check if battery is connected. If yes, charge the battery.

**The handset turn off when receiving a call and going off-hook.**

Charge the battery. If still a problem change the battery as it might be defective.

### 16.2 Information

#### 16.2.1 Error information

Improper function of the handset might be related to the infrastructure to which the handset is connected to.

Before declaring a handset for repair be sure that the main system is operating properly.

#### **Warranty**

The handset is covered by a normal warranty solution, except the battery. The lifetime of the battery depends on the general use of the handset.

The handset is not covered by a general warranty if:

- The handset is exposed to water or metal dust.
- The handset is mistreated.
- The handset is exposed to unauthorized break-in.

#### 16.2.2 Technical specification

##### **Approvals**

Access profile: EN 300444 V1.4.1:2002

EMC: EN 301 489 - 1: Version 1.4.1

EN 301 489 - 6: Version 1.2.1

Radio: EN301 406 V1.5.1. 2003

Safety: EN60950-1: 2001 + A11 + CORRIG

### Size and weight

Size: 143 x 48 x 26 mm

Weight: 110 g incl. battery  $\pm$  10 g

### Capacity

Active talking time 15 hours

Stand-by time 150 hours

### Temperature and air pressure

Operating temperature: 0-40°C

Air pressure: Normal atmosphere condition

## 16.2.3 International Regulatory and Product Information

 	<p><b>Please find the EC Declaration of Conformity at: <a href="http://www.kirktelecom.com/company/suk273.asp">http://www.kirktelecom.com/company/suk273.asp</a></b></p> <p><b>The WEEE Marking on this equipment indicates that the product must not be disposed of with unsorted waste, but must be collected separately.</b></p>
--	---

## 16.2.4 Important Safety Instructions

Before using your telephone equipment, you should always follow basic safety instruction to reduce the risk of fire, electrical shock and injury to persons, and damage to property.

1. Read and understand all instructions
2. Follow all warnings and instructions including those marked on the product
3. Unplug this product before cleaning. Do not use liquid cleaners or aerosol cleaners. Use damp cloth for cleaning
4. Do not install the telephone equipment in the bathroom or near a wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool
5. Slots or openings in the equipment are provided for ventilation to protect it from over-heating. These openings must not be blocked or covered.
6. The product should be operated only from the type of power source indicated on the instructions. If you are not sure of the type of power supply, consult your dealer or local power company.
7. Do not overload wall outlets and extension cords as this can result in fire or electrical shock.

8. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in fire, electrical shock, or injury. Never spill liquid of any kind into this product.
9. To reduce the risk of electrical shock or burns, do not disassemble this product. Opening or removing covers may expose you to dangerous voltages, dangerous electrical current, or other risks. Incorrect reassembly can cause electrical shock when the appliance is subsequently used. If the product need repair, consult your dealer.
10. Refer servicing to qualified service personnel.
11. Avoid using telephone during an electrical storm. There may be a risk of electrical shock from lightning
12. Do not use the telephone to report a gas leak in the vicinity of the leak
13. Do not place the base or charger near microwave ovens, radio equipment, or non-ground connected televisions.

These appliances may cause electrical interference to the base or handset

14. The charger must be placed on a hard, flat surface and connected to a functional 120 volt AC power source depending on the country of use.
15. This telephone will not operate in the event of a blackout. Please keep a backup phone for emergencies.

#### *16.2.4.1 Intrinsic safety*

Do not use the handset in conditions where there is a danger of electrically ignited explosions.

#### **Exposure to sunlight, heat and moisture**

Do not expose the cordless phone to direct sunlight for long periods. Keep the cordless phone away from excessive heat and moisture.

#### **Spare parts and accessories**

Use only approved spare parts and accessories. The operation of non-approved parts cannot be guaranteed and may even cause damage.

#### **Power failure**

In the event of a power failure or flat battery, you cannot use the handset to make or receive calls

#### **Battery Precautions**

1. Periodically clean the charge contacts on both the charger and handset.
2. Exercise care in handling batteries in order not to short the batteries with conducting materials such as rings, bracelets, and keys. The batteries or conducting material may overheat and cause burns or fire
3. Do not open or mutilate the batteries, released electrolyte is corrosive and may cause damage to the eyes or skin. The electrolyte may be toxic if swallowed.
4. During charging batteries heat up. This is normal and not dangerous
5. Do not use non-Nortel charging devices. This could damage the batteries

#### **Notices**

Before installing this equipment, users should ensure that it is permissible

to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas

**CAUTIONS:** Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

If your telephone equipment causes harm to the telephone network, the telephone company may ask you to disconnect the system from the line until the problem has been corrected or they may discontinue your service temporarily. If possible, they will notify you in advance. But if advance notice is not practical, you should be notified as soon as possible. You will be informed of your right to file a complaint with the FCC.

Your telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the proper functioning of your telephone system. If they do and it is possible, you will be notified in advance to give you an opportunity to maintain uninterrupted telephone service. If you experience trouble with this telephone system, disconnect it from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning.

**Note:** This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to local regulations. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**FCC Note:** This advice complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This advice may not cause harmful interference, and (2) this advice must accept any interference received, including interference that may cause undesired operation.

**IC Note:** Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) this advice must accept any interference, including interference that may cause undesired operation of the device.

The Term "IC": before the certification/registration number only signifies that the Industry Canada technical specifications were met.

**Power Outage:** In the event of a power outage, your cordless telephone will not operate. The cordless telephone requires electricity for operation. You should have a telephone which does not require electricity available for use during power outages.

**Information to user:** The users manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.





